



# SAFE TOUCH APPLICATION GUIDE

---

**MMK 7 SAFE TCH — SAFE TOUCH KIT FOR MEDIA 7” SCREEN MACHINES**

**MMK 9 SAFE TCH — SAFE TOUCH KIT FOR MEDIA 9” SCREEN MACHINES**

**PDK SAFE TCH — SAFE TOUCH KIT FOR COTI & CALI HOT DRINK MACHINES**

**ICK SAFE TCH — SAFE TOUCH KIT FOR ICON HOT DRINK MACHINES**

**LNK SAFE TCH — SAFE TOUCH KIT FOR LINEA TABLETOP MACHINES**

**August 2020**

© 2019 Crane Payment Innovations, Inc.

The content of this presentation is proprietary and confidential information of Crane Payment Innovations, Inc.  
It is not intended to be distributed to any third party without the written consent of CPI.

**PR17566000 REV A**

# SAFE TOUCH - GETTING STARTED

The purpose of this document is to outline the best method for application of the SAFE TOUCH Anti-Microbial screen covers for Crane MEDIA, COTI and CALI machines.

## **Equipment required**

- ☐ Alcohol based cleaning wipes or alcohol based cleaning solution
- ☐ Squeegee graphic applicator tool
- ☐ Masking tape (for COTI and CALI models)
- ☐ Water and washing up liquid spray bottle (for COTI and CALI models)
- ☐ Scissors




NB. Alcohol wipes are available from Crane using part number ZC10925000

# SAFE TOUCH – MEDIA 1 & 2



Safety first! This must be carried out by a trained individual.

1. Open the monetary door and power OFF the machine at the main power switch before starting

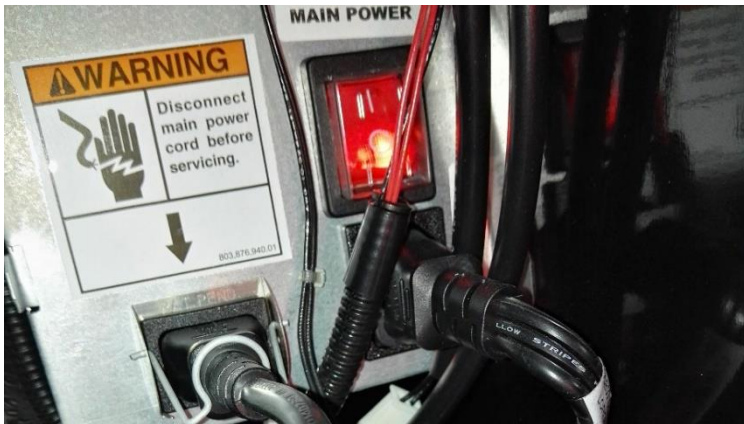

For MEDIA machines with a 7" touchscreen use kit;

**MMK 7 SAFE TCH**

For MEDIA machines with a 9" touchscreen & MEDIA Keypad use kit;

**MMK 9 SAFE TCH**

2. Using an alcohol based spray or alcohol based cleaning solution clean the MEDIA screen to remove any grease, fingerprints and dust.

NOTE: if you are using an alcohol based cleaning solution this must be sprayed onto a clean lint free cloth. **Do not spray directly onto the touch screen.**



# SAFE TOUCH – MEDIA 1 & 2

3. Take the SAFE TOUCH film and peel back the rear release layer by approx. 15mm and fold it over to provide a datum edge to align to the top of the touchscreen.




4. Fit the top edge of the SAFE TOUCH film to the top of the touch screen.



# SAFE TOUCH – MEDIA 1 & 2

5. Using the graphic squeegee applicator apply the SAFE TOUCH screen top edge and then work down the touchscreen as you remove the release layer. Take care to apply the screen slowly removing any air bubbles as you go. Work all the way to the bottom of the screen, ensuring all edges are worked down.

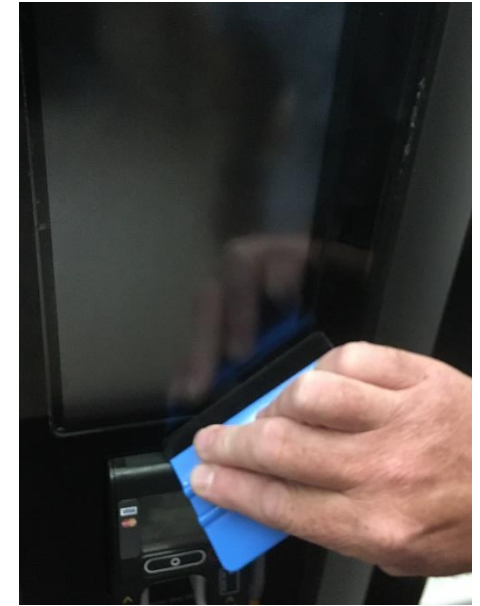



# SAFE TOUCH – MEDIA 1 & 2

6. To communicate SAFE TOUCH is applied to your MEDIA machine, fit the SAFE TOUCH label to the machine.



7. Power your machine back ON using the main power switch. Your MEDIA machine is now ready for use with SAFE TOUCH applied.

NOTE: On MEDIA1 machines you should recalibrate your touchscreen



# SAFE TOUCH — COTI & CALI



Safety first! This must be carried out by a trained individual.

1. Open the machine door and power OFF the machine at the main power switch above the ingredient canisters before starting



For COTI & CALI machines use kit;  
**PDK SAFE TCH**

2. Using an alcohol based spray or alcohol based cleaning solution clean the glass screen and the surrounding graphic to remove any grease, fingerprints and dust. A COTI machine is shown, but the process for CALI is identical.

NOTE: if you are using an alcohol based cleaning solution this must be sprayed onto a clean lint free cloth. **Do not spray directly onto the touch screen.**




# SAFE TOUCH — COTI & CALI

3. Take the SAFE TOUCH film and apply it with the backing to the front of the screen, ensuring the film is aligned to the top and sides of the glass screen. Fix it in place with masking tape. TIP – Peel the ends of the masking tape up to ease removal later




4. With the SAFE TOUCH film secured with masking tape, peel back to release layer by approx. 15mm to provide a datum edge to align to the top of the touchscreen. TIP – it may be easier to cut the release layer than folding it.

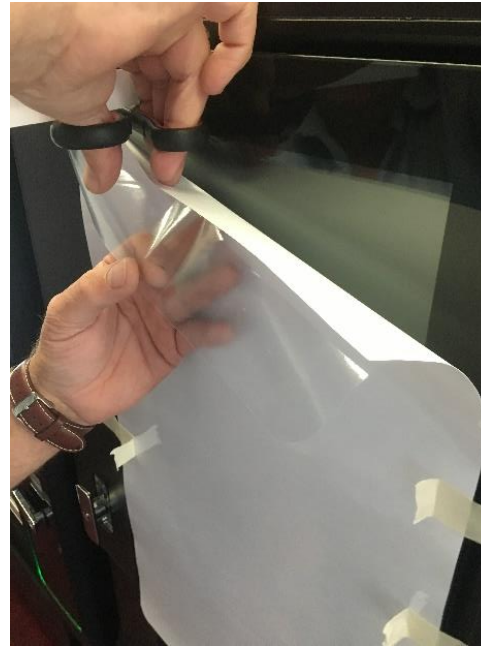





# SAFE TOUCH — COTI & CALI

5. Fit the top edge of the SAFE TOUCH film to the top of the touch screen and work it down.

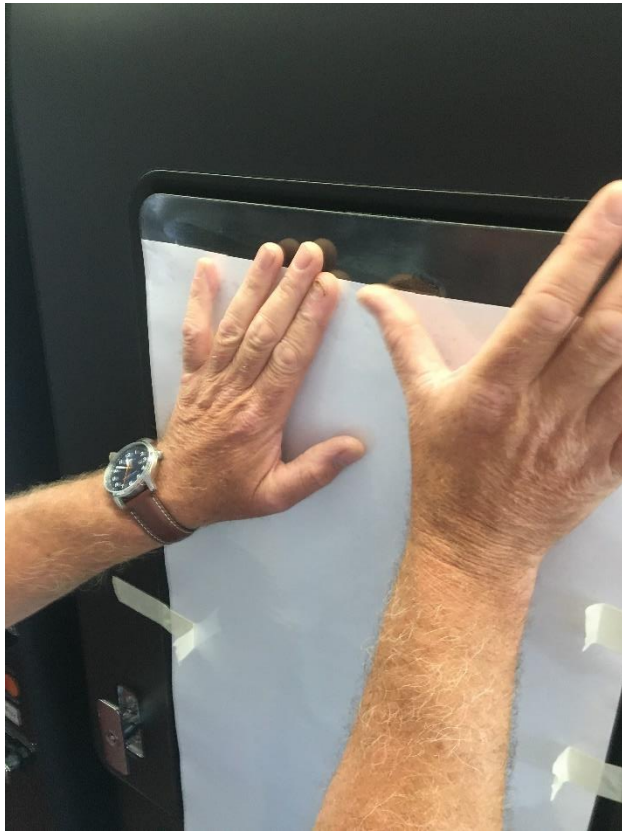

6. Remove the masking tapes to allow you to lift the SAFE TOUCH film. The larger film for COTI & CALI is best applied wet with a water and washing up liquid solution

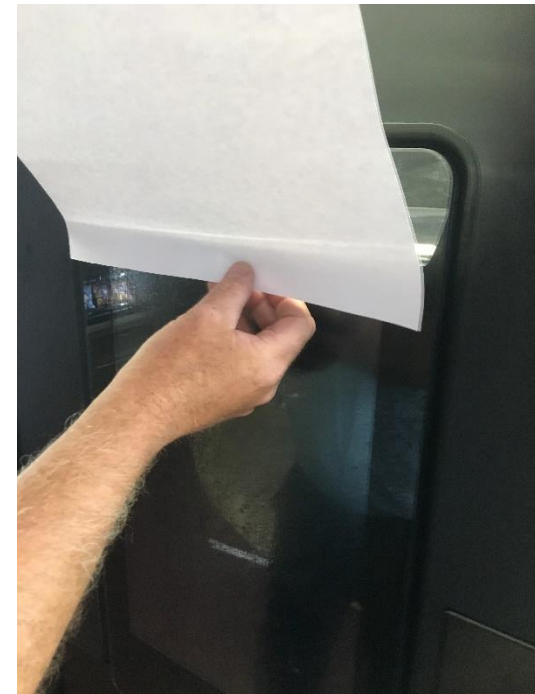
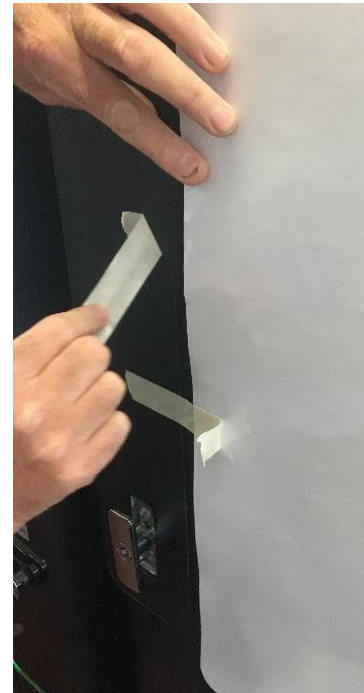


# SAFE TOUCH — COTI & CALI

7. With the SAFE TOUCH film lifted up, spray the glass with your water and washing up liquid solution. Note; you only need a very small amount washing up liquid.





8. Now peel back the release layer so that you can start to apply the SAFE TOUCH film.

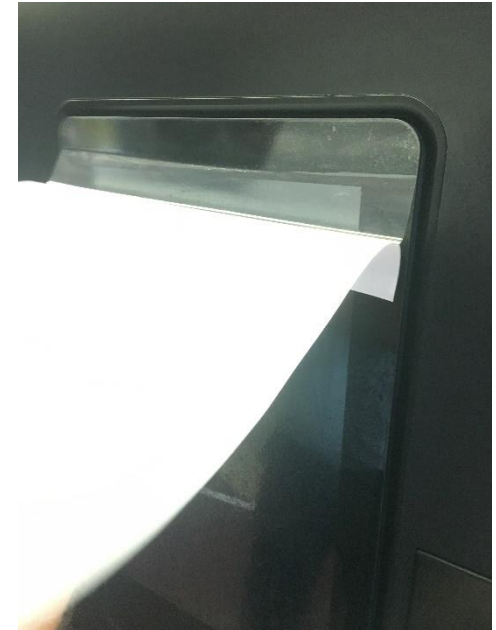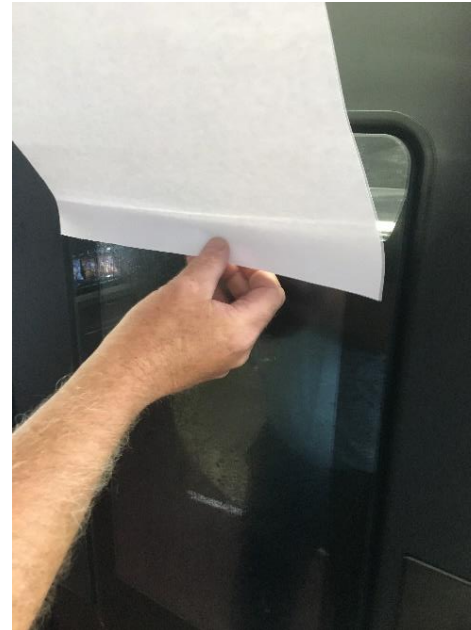

# SAFE TOUCH — COTI & CALI

9. Using the graphic squeegee applicator apply the SAFE TOUCH screen top edge and then work down the touchscreen as you remove the release layer. Take care to apply the screen slowly removing any air bubbles as you go. Work all the way to the bottom of the screen, ensuring all edges are worked down.

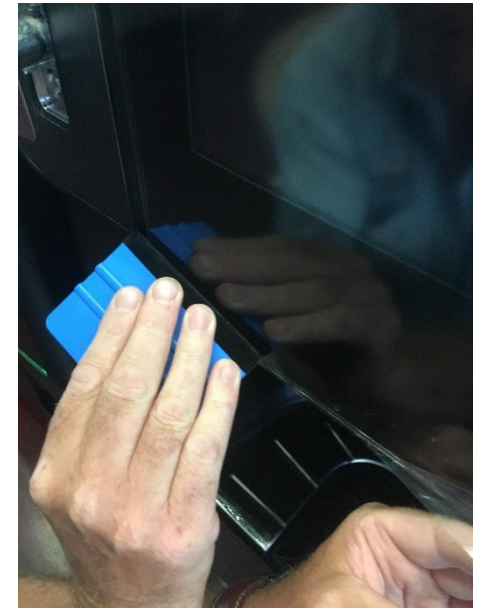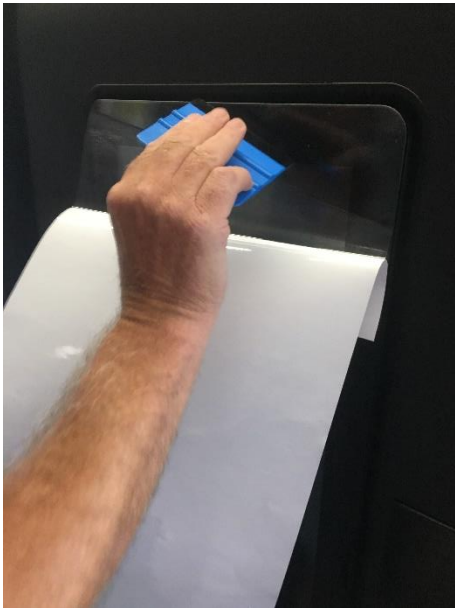


# SAFE TOUCH — COTI & CALI

10. To communicate SAFE TOUCH is applied to your COTI/CALI machine, fit the SAFE TOUCH label to the machine.



11. Power your machine back ON using the main power switch. Your COTI/CALI machine is now ready for use with SAFE TOUCH applied.

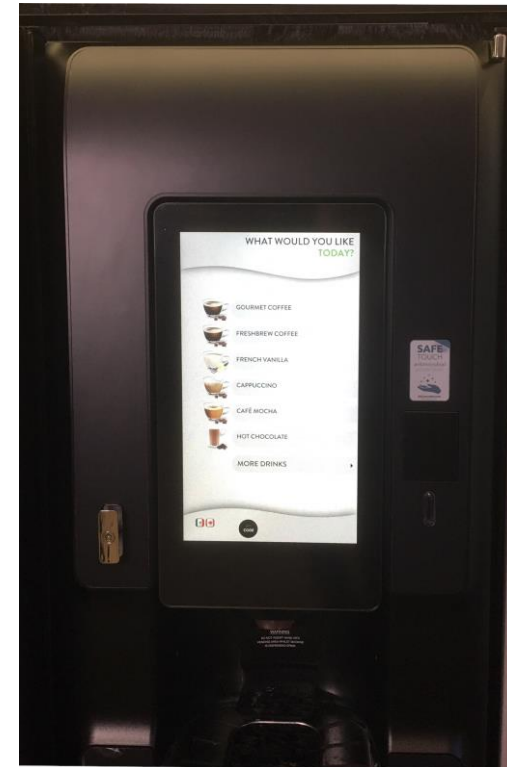



# SAFE TOUCH – ICON



Safety first! This must be carried out by a trained individual.

1. Open the machine door and power OFF the machine at the main power switch above the ingredient canisters before starting



For COTI & CALI machines use kit;  
**ICK SAFE TCH**

2. Using an alcohol based spray or alcohol based cleaning solution clean the glass door around the selection area to remove any grease, fingerprints and dust.

NOTE: if you are using an alcohol based cleaning solution this must be sprayed onto a clean lint free cloth. **Do not spray directly onto the touch screen.**

3. Peel back the SAFE TOUCH release layer by approx. 15mm to provide a datum edge to align beneath the display screen and centred over the drink selection button sensors (see next page).

TIP – it may be easier to cut the release layer than folding it.





# SAFE TOUCH – ICON

4. Apply the top edge of the SAFE TOUCH film as shown below and work it down along the top edge.



5. For ICON, the SAFE TOUCH film is best applied wet using the same process as for COTI and CALI shown on previous pages. With the SAFE TOUCH film lifted up, spray the door glass with your water and washing up liquid solution. Note; you only need a very small amount washing up liquid.

6. Now peel back the release layer so that you can start to apply the SAFE TOUCH film.

7. Using the graphic squeegee applicator apply the SAFE TOUCH screen top edge and then work down as you remove the release layer. Take care to apply the film slowly removing any air bubbles as you go. Work all the way to the bottom of the film, ensuring all edges are worked down.

8. To communicate SAFE TOUCH is applied to your ICON machine, fit the SAFE TOUCH label.

9. Power your machine back ON using the main power switch. Your ICON machine is now ready for use with SAFE TOUCH applied.

# SAFE TOUCH – LINEA



Safety first! This must be carried out by a trained individual.

1. At the back of the machine, switch OFF using the main power switch



For LINEA machines use kit;  
**LNK SAFE TCH**

2. Using an alcohol based spray or alcohol based cleaning solution clean the glass area of the door thoroughly to remove any grease, fingerprints and dust.

NOTE: if you are using an alcohol based cleaning solution this must be sprayed onto a clean lint free cloth. **Do not spray directly onto the touch screen.**

3. Peel back the SAFE TOUCH release layer by approx. 15mm to provide a datum edge to align to the top edge of the glass (see next page).

TIP – it may be easier to cut the release layer than folding it.



# SAFE TOUCH – LINEA

4. Apply the top edge of the SAFE TOUCH film as shown below and work it down along the top edge.



5. For LINEA, the SAFE TOUCH film is best applied wet using the same process as for COTI and CALI shown on previous pages. With the SAFE TOUCH film lifted up, spray the door glass with your water and washing up liquid solution. Note; you only need a very small amount washing up liquid.

6. Now peel back the release layer so that you can start to apply the SAFE TOUCH film.

7. Using the graphic squeegee applicator apply the SAFE TOUCH screen top edge and then work down as you remove the release layer. Take care to apply the film slowly removing any air bubbles as you go. Work all the way to the bottom of the glass, ensuring all edges are worked down.

8. To communicate SAFE TOUCH is applied to your LINEA machine, fit the SAFE TOUCH label.

9. Power your machine back ON using the main power switch. Your LINEA machine is now ready for use with SAFE TOUCH applied.



# THANK YOU

---

For further information on this procedure or for any other technical query, please contact your local Crane Merchandising Systems technical representative.

Visit the Crane Technical Library - <https://techlibrary.cranems.co.uk/>

or contact the Technical Helpdesk Team

E: [technicalsupport@cranems.eu](mailto:technicalsupport@cranems.eu)

T: +44 (0)1249 667323